

# Ambient

Controller-less  
PCI V.92 Modem

## Installation Guide

## **Hardware installation:**

**With the power to your PC disconnected, remove the PC casing. Press the modem card firmly into the PCI slot, and secure it with screws to your PC. Reinstall the casing on your PC.**

### **Windows 98:**

1. **After the hardware installation, turn on your PC. Windows will give you the message that it has **New Hardware Found**. click **Next**.**



2. **Select the option "Search for the best driver for your device (Recommended)" and click **Next**.**




3. **Select the "Specify a location" (CD-rom) E:\DRIVER\Win9x and click **Next**.**



4. **Windows has found the driver and it's ready to install. Click Next.**




5. **Windows is now Copying the Files.**

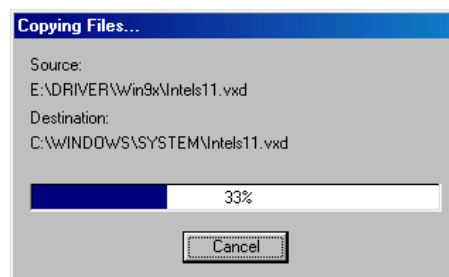

6. **Windows has finished the installation and the hardware is installed. Click Finish.**



7. In the pop-up dialog select **United Kingdom** and click **Apply** and then **OK**

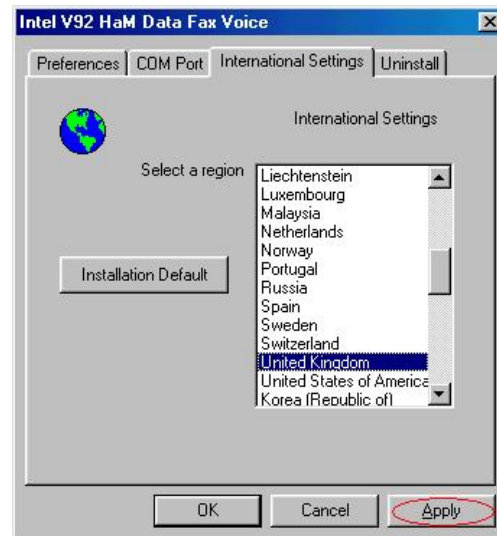

## **Windows ME:**

1. After the hardware installation, turn on your PC. Windows will give you the message that it has **New Hardware Found**.



2. Windows will start the **Add New Hardware Installation Wizard**. Click **"Specify the location of the driver (advanced)"** and click **Next**.



3. Select “Search for the best driver for your device (Recommended)” and “specify a location”(CD-rom) d:\driver\WinME and click **Next**.



4. Now Windows has located the driver and is ready to install it. Click **Next**.



5. Windows has finished installing the new hardware device click **Finish**.



**6. Windows has found new hardware.**



**7. Select "Automatic search for a better driver (Recommended)". Click Next.**




**8. Windows is now ready to install the driver. Click Next.**




**9. Windows has finished installing the new hardware device.**




**10. Windows has found the new hardware.**

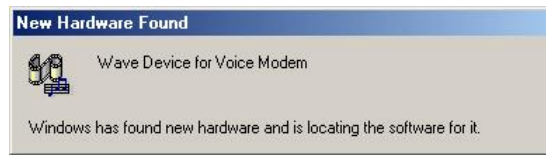

**11. Select the Region United Kingdom and click **Apply** then **OK**.**

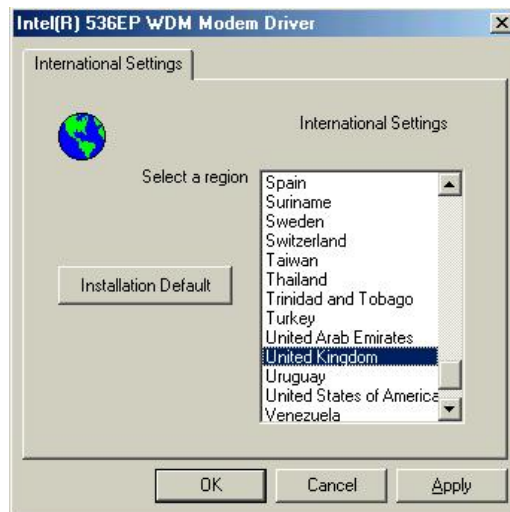

**12. In device manager you'll find the modem installed under the subject modems**

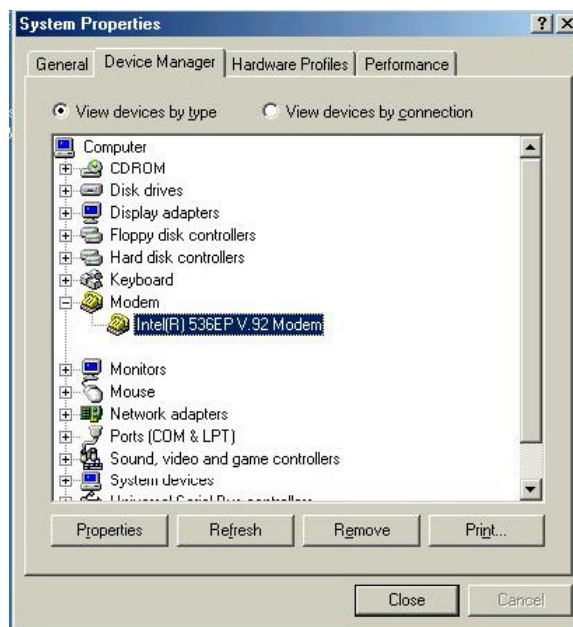

## **Windows 2000:**


1. After the hardware installation, turn on your PC. Windows will give you the message that it has **Found New Hardware**.



2. Windows will start the "Found New Hardware Wizard" click **Next**.



3. Select the option "Search for a suitable driver for my device (recommended)" and click **Next**.

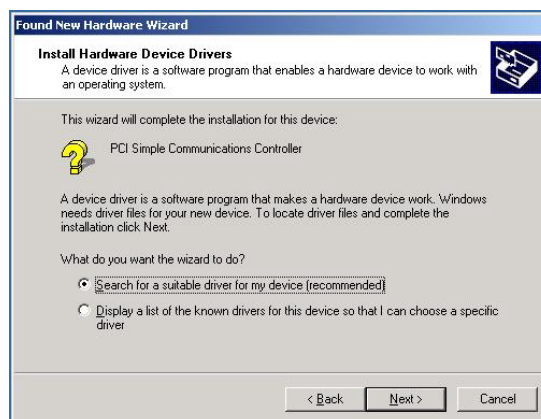




4. Select the option "Specify a location" and click **Next**.



5. Specify the location "(CD-ROM) d:\driver\Win2k" and click **OK**.




6. Windows has found the driver and is now ready to install. Click **Next**.

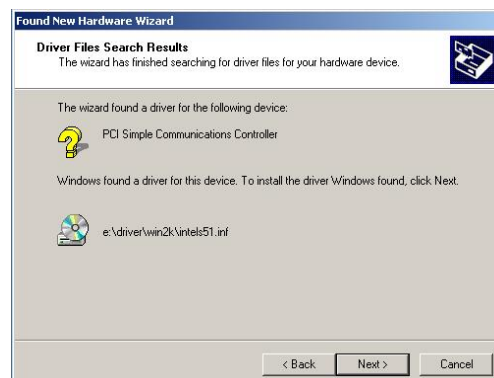

7. Windows has now finished installing the driver and your device is ready for use. Click **Finish**.



8. In device manager you'll find the modem installed under the subject modems

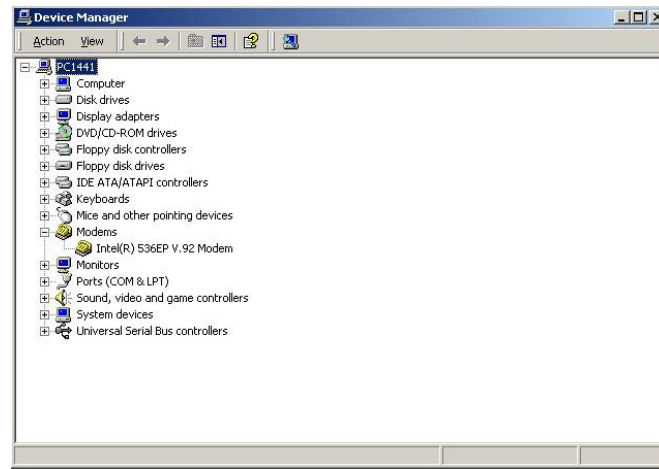

## **Windows XP:**

1. After the hardware installation, turn on your Pc. Windows will give you the message that it has **Found New Hardware**.




2. Windows will start the **New Hardware Installation Wizard**. Click "install from a list or specific location" and click **Next**.




3. Click "Search for the best drivers in these locations", and click "include this location in the search" specify the location (CD-rom) d:\driver\XP and click **Next**




4. Windows will now install the driver.

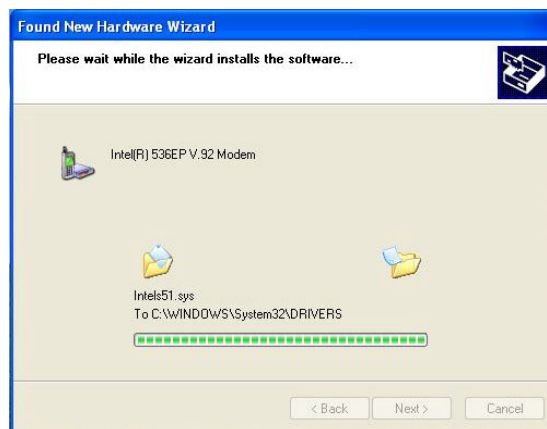


5. Windows has finished installing the driver click **Finish**.

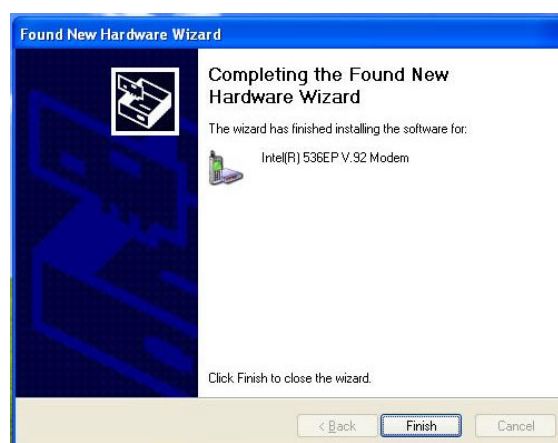

6. The hardware is now installed and ready for use.

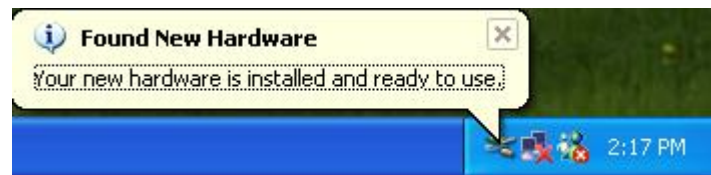

7. In device manager you'll find the modem installed under the subject modems

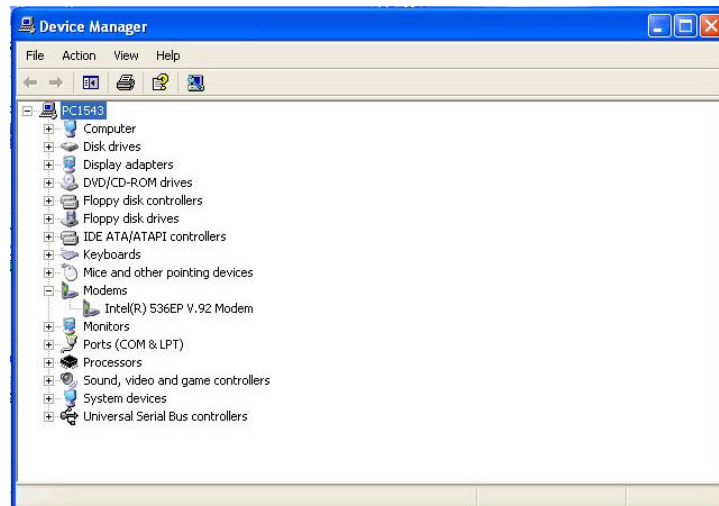

## **Diagnostics**

### **Windows 98/ME**

1. Move your cursor as following sequence **Start \ Settings \ Control Panel** and click **Control Panel**. Then double-click on the **Modems** icon.
2. To test the modem by clicking on the **Diagnostics** tab. Select the **COM port** which the modem is setting, and clicks **More Info....**
3. If your modem is responding to AT commands and functioning correctly, it means that your modem is working properly. Click **OK** to end this procedure.

### **Windows 2000**

1. Move your cursor as following sequence **Start \ Settings \ Control Panel** and click **Control Panel**. Then double-click on the **Phone and Modem Options** icon.
2. Click **Modems** tab and select Ambient modem then click **Properties**.
3. Click **Diagnostics** tab, then click **Query Modem**.
4. If your modem is responding to AT commands and functioning correctly, it means that your modem is working properly. Click **OK**.

### **Windows XP**

1. Move your cursor as following sequence **Start \ Control Panel** and click **Control Panel**. Then double-click on the **Phone and Modem Options** icon.
2. Click **Modems** tab and select Ambient modem then click **Properties**.
3. Click **Diagnostics** tab, then click **Query Modem**.
4. If your modem is responding to AT commands and functioning correctly, it means that your modem is working properly. Click **OK**.

## **Uninstalling Procedures**

### **Windows 98**

1. Move your cursor as following sequence **Start \ Settings \ Control Panel** and click **Control Panel**. Then double-click on the **Intel(R) 536EP V.92 Modem** icon.
2. Click on the **Uninstall** tab. Then click **Perform Uninstall** icon.
3. Click **Yes** to remove the modem.
4. Click **Yes** to shut down Windows and remove your modem card.

### **Windows ME**

1. Move your cursor as following sequence **Start \ Settings \ Control Panel** and click **Control Panel**. Then double-click on the **System** icon.
2. Select **Intel(R) 536EP V.92 Modem** from the list and then click the **Add/Remove** button.
3. Click **OK**.

### **Windows 2000**

1. Move your cursor as following sequence **Start \ Settings \ Control Panel** and click **Control Panel**. Then double-click on the **Add/Remove Hardware** icon.
2. To continue, click **Next**.
3. Select **Uninstall/Unplug a device**, then click **Next**.
4. Select **Uninstall a device**, then click **Next**.
5. Select the **Intel(R) 536EP V.92 Modem**, then click **Next**.
6. Select **Yes, I want to uninstall this device**, then click **Next**.
7. Click **Finish** to end this procedure.

### **Windows XP**

1. Move your cursor as following sequence **Start \ Settings \ Control Panel** and click **Control Panel**. Then double-click on **System**
2. Select the tab **Hardware** and go to the **Device Manager**.
3. Select **Modems** and select **Intel(R) 536EP V.92 Modem**.
4. Right click on the **Intel(R) 536EP V.92 Modem** and select **Uninstall**.
5. Click **OK** to end this procedure.